


DIMM-MX6-PB-1

Hardware Manual

Rev5 / 16.08.2018

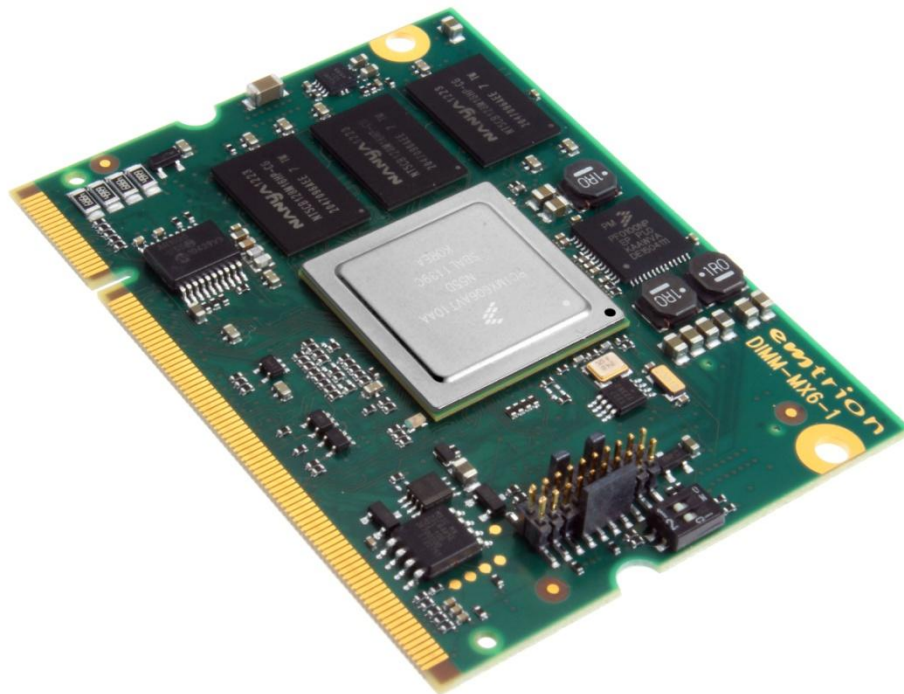

© Copyright 2018 **emtrion GmbH**

All rights reserved. This documentation may not be photocopied or recorded on any electronic media without written approval. The information contained in this documentation is subject to change without prior notice. We assume no liability for erroneous information or its consequences. Trademarks used from other companies refer exclusively to the products of those companies.

Revision: **5 / 16.08.2018**

Rev	Date/Signature	Changes
1	25.04.2018/Bue	First revision
2	01.06.2018/Bue	Corrected I2C2 usage and PMIC
3	20.06.2018/Bue	Processor Bus settings corrected
4	14.08.2018/We	Description of GPIO7 corrected in chapters 4.18, 5.1 and 6.1
5	16.08.2018/Bue	3 spare GPIOs added in chapter 4.18 SPI and Audio pin description corrected in chapter 6.1

Contents

1	Introduction.....	5
2	Block Diagram.....	6
3	Handling Precautions.....	7
4	Functional Description	8
4.1	Processor.....	8
4.1.1	Processor Clocks.....	9
4.1.2	Boot Mode	9
4.2	NOR-Flash	9
4.3	NAND-Flash.....	9
4.4	DDR3 SDRAM.....	10
4.5	Processor Bus.....	10
4.6	Ethernet.....	10
4.7	USB Host.....	11
4.8	USB Device	11
4.9	Graphic Displays.....	11
4.9.1	LVDS.....	12
4.9.2	HDMI.....	13
4.10	Touch Interface.....	13
4.11	Audio Interface	13
4.12	SD-Card Interface.....	13
4.13	Serial Ports.....	14
4.14	I ² C- Bus.....	14
4.15	SPI Interface	14
4.16	CAN	15
4.17	SATA	15
4.18	General Purpose I/Os.....	15
4.19	DIP Switches, Status LED	16
4.20	Interrupts	16
4.21	Reset	16
4.22	Power Supply	17
4.23	Connectors.....	18
4.23.1	SODIMM Connector	18
4.23.2	Extension Connector.....	18
4.23.3	Debug Connector.....	18
5	Pin Assignments.....	19
5.1	J1, SODIMM.....	19
5.2	J3, Extension Connector 2	22
5.3	J4, Debug Connector.....	23
6	Signal Characteristics	24
6.1	J1, SODIMM Connector.....	24
6.2	J3, Extension Connector	30
6.3	J4, Debug Connector.....	31

7	Technical Characteristics	32
7.1	Electrical Specifications	32
7.2	Environmental Specifications.....	32
7.3	Mechanical Specifications	32
8	Dimensional Drawing	33
9	References.....	34

1 Introduction

The DIMM-MX6-PB processor module is a SODIMM sized CPU board based on the i.MX6 processor from NXP. The processor is available as Quad, Dual or Single Cortex®-A9 Core running at up to 1 GHz. The module can be ordered with different sizes of Flash and DRAM.

The processor incorporates a variety of functions required for multimedia or industrial applications. These include a MPEG4 and H.264 encoder, a 3D graphics accelerator, display controllers with LVDS and HDMI interface, and sound input/output module. For communication an Ethernet MAC, two CAN controllers and two USB controllers are available.

All interfaces are accessible through the 200 pin SODIMM edge connector which complies mechanically with SODIMM memory sockets with 2,5V keying. High speed interfaces are available at an additional extension connector.

In the following table lists the features and interfaces of the DIMM-MX6-PB processor module:


DIMM-MX6x
1GB/2GB SDRAM
>4GB eMMC
8MB serial NOR Flash
10/100Mbit Ethernet
USB Host
USB Device
LVDS Interface 24bit max. 1080p (1920x1080)
HDMI 24bit max. 1080p(1920x1080)
4 wire resistive Touch
SSI Audio
UART RS232
4x UART LVTTTL
SPI
2x I2C (one internal, one external)
2x CAN
SPDIF in/out
3x IRQ
2x SD Card
Processor Bus Interface with 16 Addr, 16 Data
SATA
min. 8 GPIO
max. 3 PWM

Please contact emtrion GmbH for the available processor, eMMC and SDRAM configurations.

The module is available in the standard temperature range 0°C to 70°C and in the extended temperature range -40°C to 85°C.

2 Block Diagram

The following figure shows the block diagram of the DIMM-MX6-PB.

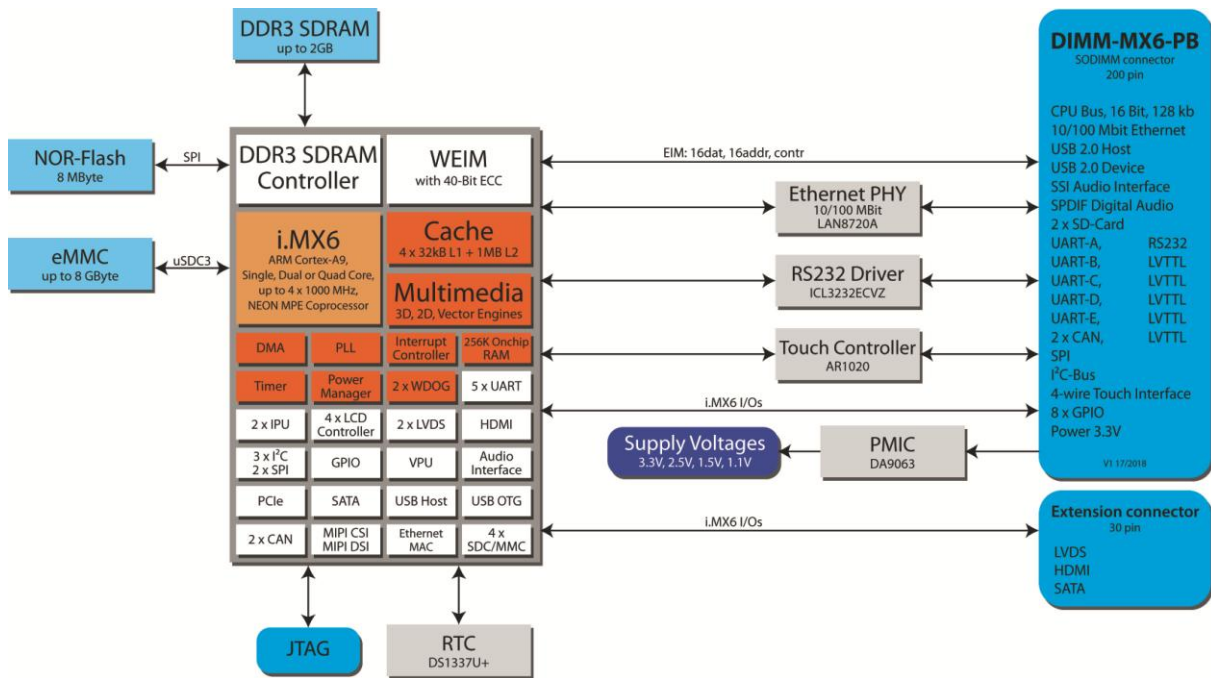

3 Handling Precautions

Please read the following notes prior to installing the DIMM-MX6-PB processor module. They apply to all ESD (electrostatic discharge) sensitive components:

- The DIMM-MX6x does not need any configurations before installation.
- The module does not provide any on-board ESD protection circuitry – this must be provided by the product it is used in.
- Before installing the module it is recommended that you discharge yourself by touching a grounded object.
- Be sure all tools required for installation are electrostatically discharged as well.
- Before installing (or removing) the module, unplug the power cable from your mains supply.
- Handle the board with care and try to avoid touching its components or tracks.

4 Functional Description

4.1 Processor

The DIMM-MX6-PB processor module uses the processor i.MX6x from NXP [1]. It includes up to 4 ARM Cortex® A9 cores and runs up to 1 GHz.

In addition to the CPU core with MMU, FPU and Caches, this processor provides a lot of features such as:

- NAND Flash controller
- DDR3 SDRAM controller
- Ethernet MAC 10/100Mbit with IEEE1588 support
- USB 2.0 Host with high-speed mode
- USB 2.0 OTG with high-speed mode
- 2 SD Card host controllers
- Two Image Processing Units which includes
 - Two Video input modules with camera capturing module
 - LCD Controller for TFT displays up to 1080p (1920x1080) @60Hz and 16/18/24 bpp
 - 24bit LVDS display port up to WXGA (1366x768) @60Hz and 16/18/24 bpp
 - 24bit HDMI port up to 1080p (1920x1080) @60Hz and 16/18/24 bpp
 - 2D and 3D graphic hardware accelerator
 - NEON SIMD media accelerator
- 4 wire Touch controller
- Two CAN controllers
- 5 UARTs with 2x 32 byte FIFO
- I2C bus interfaces
- SPI interfaces
- IrDA interfaces
- Watchdog timer
- Real time clock
- Sound interface with I2S format
- Sound interface SPDIF in and out
- SATA controller
- 32-bit timer
- JTAG debug interface

Further details of the processor can be found in the i.MX6x Reference Manual [1].

4.1.1 Processor Clocks

The 24MHz main clock is generated by a crystal. Eight internal PLLs multiply the 24 MHz main clock to generate the internal clocks. All clocks within the processor are derived from these frequencies, via various software configurable dividers.

The core clock (PLL1) can be up to 1.2 GHz. For power management, the core clock can be varied.

It must be considered that the core voltage should be adapted if the core frequency is varied.

More information about the i.MX6 clock system is described in the CCM chapter of the i.MX6 Reference Manual [1].

The RTC_XTALI clock input of the CPU is supplied by a 32.768 kHz clock from the RTC chip. That RTC chip is connected to a 32.768 kHz crystal. This clock swings even when the main supply is switched off and an auxiliary voltage (2,3V – 3,3V) is connected at the BAT pin of the SODIMM connector.

4.1.2 Boot Mode

The DIMM-MX6x Uboot can be booted either from the onboard serial NOR-Flash or external via the USB Device interface. The boot mode is configured via the DIP Switch SW1.

SW1-1	SW1-2	Boot source
0 (OFF)	1 (ON)	Serial NOR-Flash
1 (ON)	0 (OFF)	(USB) Serial

4.2 NOR-Flash

An 8 MB serial NOR flash of type MX25L6445 from Macronix is used as primary boot device. It is connected to the interface ECSPI4.

The integrated i.MX6 bootloader is configured for booting from the serial NOR flash. Booting from NOR Flash is enabled if the DIP switch SW1-1 is OFF and SW1-2 is ON.

Besides the Uboot module specific configuration data, like a MAC address, the serial number etc, are also stored in the serial NOR Flash.

Hardware write protection of the NOR flash is realized by the port pin GPIO6-11 of the i.MX6. A low level protects the flash device. During and after Reset the pin is driven low by the processor.

Besides the hardware protection the chip also supports a software protection.

4.3 NAND-Flash

To store the operating system and application data, an eMMC is used on the DIMM-MX6-PB module. It is connected to the SDHC3 interface of the processor with 8 data lines. The signalling level is fixed at 3.3V therefore higher data rates are not supported.

The eMMC is reset either by the global reset signal RESO#, by SDHC3 reset function or GPIO7-8 if the pin SD3_RST is configured as a GPIO output. A low level at the signal SD3_RST resets the eMMC.

By default a eMMC with 4 GB capacity is fit.

4.4 DDR3 SDRAM

DDR3 SDRAM is available as main memory. The RAM memory has a 64bit width interface and is clocked with 528MHz.

The SDRAM size can be selected between 512MB and 2GB, depending on the ordering code. The following table shows the address range of the different RAM sizes.

RAM size	Start address	End address
512MB	0x10000000	0x2FFFFFFF
1GB	0x10000000	0x4FFFFFFF
2GB	0x10000000	0x8FFFFFFF

Please contact emtrion GmbH for your required RAM size.

4.5 Processor Bus

The processor bus interface of the iMX6 is routed to the SODIMM connector. The interface is realized as an asynchronous SRAM interface with 16 bit data and 16 addresses lines. 32 MHz clock, control signals and one chip select signal are also routed to the SODIMM connector.

The address space is in the range 0x08000000 ... 0x0801FFFF.

The following table describes the processor bus interface signals.

Signal	Description
A[15:0]*	Address bus
D[15:0]	Data bus
CKIO	32 MHz bus clock
WAIT#	active low wait input signal
CS#	active low chip select
RD#	active low read signal
WE0#	active low selection for lower data byte D[7:0]
WE1#	active low selection for higher data byte D[15:8]
RD/WR#	Low active write enable signal

* These signals are used as boot configuration pins during reset. During reset these signals must not be driven externally.

4.6 Ethernet

The Ethernet interface is realized with the processor internal Media Access Controller (MAC) and an external Physical Layer Interface (PHY) LAN8720A from SMSC. An RMII interface is used for communication between the MAC and the PHY.

The Ethernet interface supports the operating modes 100BASE-TX or 10BASE-T, both half- and full duplex. HP Auto-MDIX is also supported.

The registers of the Ethernet PHY are accessed via the Media Independent Interface (MII).

The Ethernet signal lines (ETH_TDP, ETH_TDM, ETH_RDP, ETH_RDM) as well as two LED status signals (SPEED_LED#, LINK_LED#) that indicate the link status and the transfer speed are connected to the SODIMM connector. An appropriate transformer must be added externally.

The signal LINK_LED# indicates if data packages are transferred. ("0" = traffic). The signal is an open drain output signal.

The signal SPEED_LED# indicates if the data is transferred with 100Mbit/s. ("0" = 100Mbit/s). The signal is an open drain output signal.

The RMII 50MHz Ethernet clock is generated by the PLL6 (ENET PLL) of the i.MX6 and it is routed to the processor internal MAC and to Ethernet PHY.

The Ethernet PHY can be reset either by the global reset signal RESO# or by the GPIO7-9 if the i.MX6 pin SD4_CMD is configured as a GPIO output. A low at this pin resets the Ethernet PHY.

4.7 USB Host

The USB Host interface is realized by the internal host controller of the i.MX6x. The interface is USB 2.0 compliant, supporting data transfer rates low-speed (1,5Mbps), full-speed (12 Mbps) and high-speed (480Mbps).

To switch VBUS supply the control line USBH_PEN# is connected to the SODIMM connector. A logical "0" at the processor GPIO3-31 switches the power on. The signal USBH_OC# reports an overcurrent from the power switch at the pin GPIO3-30 ("0" = overcurrent).

The data lines and the control lines are available at the SODIMM connector. A USB power switch must be added externally. The data lines are internally terminated with 15-K Ω pulldown resistors.

The external VBUS signal must be fed back to the pin USBH_VBUS of the SODIMM connector.

4.8 USB Device

The USB Device interface is realized by the internal device controller of the i.MX6x. The interface is USB 2.0 compliant, supporting data transfers at low-speed (1,5Mbps), full-speed (12 Mbps) and high-speed (480Mbps).

The data lines and the control line USBF_VBUS are available at the SODIMM connector.

4.9 Graphic Displays

The DIMM-MX6-PB has two display ports. The first is a 24bit HDMI display port and the second is a 24bit LVDS display port.

The i.MX6 includes two Image Processing Units (IPU). One IPU can display up to two different images. Maximum four independent images can be displayed on the two available display ports. This can be configured via software.

More information about the i.MX6 Multimedia system is described in the Multimedia and IPU chapter of the i.MX6 Reference Manual [1].

4.9.1 LVDS

The LCD controller of the i.MX6x can drive the LVDS interface with resolutions up to FullHD (1920x1080) at 16/18/24bpp. The pixel clock for the display data can be generated by an internal clock or via the external LCD_CLK_IN.

The LVDS interface can be used by both IPU1 display units (IPU1_DI0 and IPU1_DI1) and both IPU2 display units (IPU2_DI0 and IPU2_DI1).

The LVDS lines are available at the extension connector J3. The following table list the LVDS signals:

signal	Description
LVDS_CLK_P/N	Differential LVDS clock
LVDS_TX0_P/N	First differential LVDS data signal pair
LVDS_TX1_P/N	Second differential LVDS data signal pair
LVDS_TX2_P/N	Third differential LVDS data signal pair
LVDS_TX3_P/N	Fourth differential LVDS data signal pair; Only used in 24bit mode

In 24 bit mode the colour mapping can be changed depending of the used display. The following table shows the default 18/24bit colour mapping in the SPWG/PSWG/VESA mode.

signal	Slot0	Slot1	Slot2	Slot3	Slot4	Slot5	Slot6
LVDS_TX0	G0	R5	R4	R3	R2	R1	R0
LVDS_TX1	B1	B0	G5	G4	G3	G2	G1
LVDS_TX2	DE	VS	HS	B5	B4	B3	B2
LVDS_TX3 (only for 24bit)	CTL	B7	B6	G7	G6	R7	R6

The following table shows the 24bit colour mapping in the JEIDA mode.

signal	Slot0	Slot1	Slot2	Slot3	Slot4	Slot5	Slot6
LVDS_TX0	G2	R7	R6	R5	R4	R3	R2
LVDS_TX1	B3	B2	G7	G6	G5	G4	G3
LVDS_TX2	DE	VS	HS	B7	B6	B5	B4
LVDS_TX3	CTL	B1	B0	G1	G0	R1	R0

4.9.2 HDMI

The LCD controller of the i.MX6x can drive HDMI with resolutions up to FullHD at 60Hz. The pixel clock for the display data can be generated by an internal clock or via the external LCD_CLK_IN.

The HDMI interface can be used by both IPU1 display units (IPU1_DI0 and IPU1_DI1) and both IPU2 display units (IPU2_DI0 and IPU2_DI1). Also Audio data can be transmitted.

The HDMI I²C interface is used for communication with the connected display.

The HDMI lines are available at the extension connector J3. The following table lists the HDMI signals.

signal	Description
HDMI_D0_P/N	First differential HDMI data signal pair
HDMI_D1_P/N	Second differential HDMI data signal pair
HDMI_D2_P/N	Third differential HDMI data signal pair
HDMI_CLK_P/N	Differential HDMI clock
HDMI_SCL	HDMI I ² C clock signal
HDMI_SDA	HDMI I ² C data signal
HDMI_HPD	Hot plug detecting signal

Watch that the high level of the signals HDMI_SDA, HDMI_SCL and HDMI_HPD must have 3.3V level. This must be ensured by the base board.

4.10 Touch Interface

A 4-wire resistive touch interface is implemented by the AR1020 touch interface controller from Microchip [3].

The touch controller is connected to the onboard I²C bus interface. The IRQ output of the controller is connected to GPIO1-5 of the i.MX6. A logical high indicates an interrupt.

The 7-bit I²C-Address is 0x4D. The touch interface signals (TOUCH_XP, TOUCH_XM, TOUCH_YP, TOUCH_YM) are available at the SODIMM connector.

4.11 Audio Interface

The integrated audio module (AUD4) of the i.MX6 is used to transfer data to an external audio codec.

The interface is available at the SODIMM connector as I2S interface to connect an external audio codec and as SPDIF interface with LVTTTL level. An appropriate driver must be added externally.

4.12 SD-Card Interface

The i.MX6 incorporates 4 interfaces to drive SD Memory or SD I/O cards.

Two interfaces (uSDHC1 and uSDHC2) are provided at the SODIMM connector with 4 data lines. uSDHC1 is used for the interface SDC1. uSDHC2 is used for the interface SDC2.

The Card Detect and Write Protect signals can be controlled either automatically by the SD card controllers or by GPIO bits of the i.MX6:

Signal	Function	GPIO
SDC1_CD#	active low card detection signal	GPIO1-1
SDC1_WP	active high write protection signal	GPIO4-20
SDC2_CD#	active low card detection signal	GPIO1-4
SDC2_WP	active high write protection signal	GPIO1-2

4.13 Serial Ports

The DIMM-MX6-PB has five serial ports. The following table lists the used UARTs:

i.MX6 interface	SODIMM interface	Modem control	Signal level
UART1	UART_B	-	LVTTTL
UART2	UART_A	RTS, CTS	RS232
UART3	UART_C	-	LVTTTL
UART4	UART_D	-	LVTTTL
UART5	UART_E	-	LVTTTL

UART2 is used as default debug and communication interface. Therefore it is realized as RS232 interface with modem control lines.

All UART ports besides UART2 can also be configured to operate as low speed (115200bps) Infrared port (IrDA).

4.14 I²C- Bus

Two I²C bus interfaces are used on the DIMM-MX6-PB module.

The interface I2C2 is used to connect some onboard I²C devices. The interface works with a transmission speed 100 kb/s. The following devices are connected to the I2C2 interface:

Device	Function	Chip Address (7bit)
DS1337U+	Real Time Clock	0x68
AR1020	Touch controller	0x4D
DA9063	PMIC	0x58

The interface I2C3 is routed to the SODIMM connector. The maximum speed is 400 kb/s.

The SCL and SDA lines of both interfaces are pulled up on board with 2.2 kΩ resistors to 3.3V.

4.15 SPI Interface

The SPI interface eCSPI2 of the i.MX6 processor is connected to the SODIMM connector.

The 4 signals SPI_SCK, SPI_SS# (SS0# of eCSPI2), SPI_MOSI and SPI_MISO are routed to the SODIMM connector.

4.16 CAN

The i.MX6 processor includes two CAN controllers, which comply with the CAN protocol specification 2.0B, supporting both standard and extended message frames.

The TX and RX signals are routed to the SODIMM connector as LVTTTL signals. A CAN transceiver must be added externally. The maximum baud rate is 1Mbps.

4.17 SATA

The i.MX6x includes a SATA controller and a SATA phy. The SATA controller is compliant with the SATA specification 3.0 at 1,5Gb/s and 3,0Gb/s.

The SATA signals are routed to the extension connector J3. The AC coupling capacitors are located on the DIMM-MX6-PB module.

More details of the SATA controller can be found in the i.MX6x Reference Manual [1].

4.18 General Purpose I/Os

Ten pins of the processor are provided as general purpose I/Os and routed to the SODIMM connector.

SODIMM Signal	i.MX6x Pin	Direction	Alternate function
GPIO0	GPIO2-0	In/Out	
GPIO1	GPIO2-1	In/Out	
GPIO2	GPIO2-2	In/Out	
GPIO3	GPIO2-3	In/Out	
GPIO4	GPIO1-9	In/Out	PWM1
GPIO5	GPIO2-9	In/Out	PWM2
GPIO6	GPIO2-10	In/Out	PWM3
GPIO7	GPIO2-27	In/Out	
GPIO8	GPIO4-15	In/Out	CAN2-RX
GPIO9	GPIO4-14	In/Out	CAN2-TX

Besides the dedicated GPIO pins three other GPIO signals are available at the SODIMM connector of the DIMM-MX6-PB board.

SODIMM Signal	i.MX6x Pin	Direction	Alternate function
VOU_RST#	GPIO2-0	In/Out	
VIO_SRC	GPIO1-7	In/Out	
VIO_RST#	GPIO2-22	In/Out	

The signalling level of all GPIO pins is 3.3 V.

4.19 DIP Switches, Status LED

Two DIP switches are provided on the DIMM-MX6-PB to select the boot mode of the i.MX6 processor. The following table lists the two valid boot mode options:

SW1-1	SW1-2	Boot source
0 (OFF)	1 (ON)	Serial NOR-Flash
1 (ON)	0 (OFF)	(USB) Serial

More details of the boot mode options can be found in the i.MX6x Reference Manual [1].

A bicolour LED is connected to the port pins GPIO2-6 and GPIO2-7 of the i.MX6. If GPIO2-6 is high the green LED is lighting. If GPIO2-7 is high the red LED is lighting.

4.20 Interrupts

The processor i.MX6 has an integrated interrupt controller that analyzes all interrupt sources, prioritizes them and outputs the interrupt with the highest priority to the CPU.

Generally each GPIO input can be configured to operate as interrupt input. Seven GPIOs are configured as interrupt inputs on the DIMM-MX6-PB. The interrupt sources are listed in following table:

i.MX6 GPIO Port	Source	Polarity	i.MX6 IRQ
GPIO6-7	SODIMM IRQ_A	low active	108
GPIO6-15	SODIMM IRQ_B	low active	108
GPIO6-16	SODIMM IRQ_C	low active	109
GPIO2-11	RTC DS1337	low active	100
GPIO1-5	Touch ControllerAR1020	high active	98
GPIO2-8	PMIC DA9063	low active	100
GPIO3-23	Power OFF	high active	103

- IRQ_A, IRQ_B and IRQ_C are general purpose interrupts from the SODIMM connector. The signal level of each interrupt is 3.3 V.
- The RTC interrupt is driven by the onboard RTC.
- The Touch interrupt is driven by the onboard Touch Controller.
- The PMIC interrupt is driven by the onboard Power Management chip.
- The Power OFF interrupt is asserted when the signal pin RESI# of the SODIMM interface is driven low. This interrupt serves as reset warning and the SW can terminate itself until a reset is asserted 1s later.

4.21 Reset

There are several ways for issuing a reset signal:

- A voltage monitor checks the board voltages. If one voltage is out of tolerance a module reset is asserted. The reset time in that case is min 15ms.

- The active low signal RESI# at the SODIMM connector and the signal JTAG_RESI# at the debug connector, can assert a reset if this signal is asserted longer than 1s. Immediately after the falling edge a Power OFF interrupt is asserted, that can be used by the SW to shut down itself until the reset is asserted.
- A processor internal SW reset is available at a processor pin, if the pin function SYSTEM_RST is enabled. In that case the RESO# pin is asserted if a SW reset is asserted.

All resets are hardware resets of the whole board. All resets except the internal SW reset issue a processor cold reset. The internal SW reset issues a processor warm reset.

The duration of the reset signal is min. 15ms. For resetting external devices the reset signal is available as an output (RESO#) at the SODIMM connector.

4.22 Power Supply

The typical power consumption (all 4 cores) is 1,5A (tbc) at +3,3V, +/- 5%, which must be supplied via the SODIMM connector. The onboard required voltages for the processor and the other parts are generated on board via a Power Management (PMIC) chip and the i.MX6 processor. The PMIC generates the input voltages for the i.MX6. The i.MX6 internal LDO's generate the power supply voltages for the i.MX6 cores and modules.

The voltages generated by the PMIC can be configured via the I²C interface. The voltages generated by the i.MX6 can be configured via processor internal registers. During operation the voltages can be varied depending on the core frequencies and die temperature.

More details about DVFS (Dynamic Voltage and Frequency Scaling) and power supply variation are described in the chapter 26 of the i.MX6 Reference Manual [1].

The SODIMM BAT pin is the battery input pin for the RTC power supply. The typical power consumption of the RTC via the BAT pin is < 1µA.

4.23 Connectors

The module DIMM-MX6-PB incorporates three connectors. J1 is the SODIMM connector, J3 is an extension connector and J4 is the JTAG debug connector.

The connector J3 is located on the bottom side of the CPU module.

4.23.1 SODIMM Connector

Most signals of the board are available at the SODIMM connector.

The DIMM interface is a 200 pos SODIMM connector that fits mechanically into a regular DDR1 SODIMM memory socket with 2,5V keying. These sockets are available from various manufacturers.

Usage details of the connector and its electrical and mechanical characteristics can be found in following chapter 5.1 of this document.

Notes:

The pin out of the SODIMM connector is NOT compatible with memory sockets. Insertion into a socket with wrong pin out may damage the DIMM-MX6-PB and the carrier board.

Most of the pins are directly connected with the processor i.MX6.

4.23.2 Extension Connector

The serial high speed interfaces LVDS, SATA and HDMI are routed to the extension connector J3. More details about the pin assignment and the connector types are described in chapter 5.2. The signal characteristics are described in chapter **Fehler! Verweisquelle konnte nicht gefunden werden..**

4.23.3 Debug Connector

All ARM debug interface and the Boot Mode signals are available at the 20 pin header J4.

Please contact emtrion GmbH for further details how to connect an emulator to J4.

5 Pin Assignments

5.1 J1, SODIMM

Type SODIMM, 200 pos, 2.5 V keying

Pin	Signal	Interface		Signal	Pin		
1	SPEED_LED#	Ethernet	USB Host	USBH_PEN#	2		
3	ETH_TDP			USBH_OC#	4		
5	ETH_TDM			USBH_DM	6		
7	GND			USBH_DP	8		
9	ETH_RDP		USB Device	USBF_VBUS	10		
11	ETH_RDM			USBF_DM	12		
13	LINK_LED#			USBF_DP	14		
15	n/c	USB Host	Power	GND	16		
17	CAN1_TX	CAN	UART-A	UART2_TXD#	18		
19	CAN1_RX			UART2_RXD#	20		
21	UART5_TXD	UART-E		UART2_RTS#	22		
23	UART5_RXD			UART2_CTS#	24		
25	UART4_TXD	UART-D	Touch	Touch_XP	26		
27	UART4_RXD	UART-C		Touch_XM	28		
29	UART3_TXD			Touch_YP	30		
31	UART3_RXD	UART-B	A/D	Touch_YM	32		
33	UART1_TXD			n/c	34		
35	UART1_RXD			n/c	36		
37	n/c	A/D	n/c	38			
39	+3V3	Power		GND	40		
41	n/c	LCD		n/c	42		
43	n/c			n/c	44		
45	n/c			n/c	46		
47	n/c			n/c	48		
49	n/c			n/c	50		
51	n/c			n/c	52		
53	n/c			n/c	54		
55	n/c			n/c	56		
57	n/c			n/c	58		
59	n/c			n/c	60		
61	n/c			n/c	62		
63	n/c			n/c	64		
65	+3V3			Power		GND	66
67	n/c			LCD		n/c	68
69	n/c	n/c	70				
71	n/c	n/c	72				

73	n/c		n/c	74	
75	n/c		n/c	76	
77	VOU_RST#*	CSI1	n/c	78	
79	n/c		n/c	80	
81	n/c		n/c	82	
83	n/c		n/c	84	
85	n/c		n/c	86	
87	n/c		n/c	88	
89	VIO_SRC		n/c	90	
91	VIO_RST#		n/c	92	
93	+3V3	Power	GND	94	
95	SDC2_D0	SDC2	SDC1	SDC1_D0	96
97	SDC2_D1			SDC1_D1	98
99	SDC2_D2			SDC1_D2	100
101	SDC2_D3			SDC1_D3	102
103	SDC2_CMD			SDC1_CMD	104
105	SDC2_CLK			SDC1_CLK	106
107	SDC2_CD#			SDC1_CD#	108
109	SDC2_WP			SDC1_WP	110
111	SPI_SS#	SPI	SPI_MISO	112	
113	SPI_SCK		SPI_MOSI	114	
115	I2C3_SCL	I2C	Audio	AUDIO_BCK	116
117	I2C3_SDA			AUDIO_LRC	118
119	SPDIF_IN	SPDIF		AUDIO_DATI	120
121	SPDIF_OUT			AUDIO_DATO	122
123	GND	Power	n/c	124	
125	CAN2_RX	GPIO	CAN2_TX	126	
127	GPIO6		GPIO7	128	
129	GPIO4		GPIO5	130	
131	GPIO2		GPIO3	132	
133	GPIO0		GPIO1	134	
135	+3V3	Power	GND	136	
137	n/c	Address A[23:0]	n/c	138	
139	n/c		n/c	140	
141	n/c		n/c	142	
143	n/c		n/c	144	
145	A14		A15	146	
147	A12		A13	148	
149	A10		A11	150	
151	A8		A9	152	
153	A6		A7	154	
155	A4		A5	156	
157	A2	A3	158		

159	A0		A1	160
161	+3V3	Power	GND	162
163	D14	Data D[15:0]	D15	164
165	D12		D13	166
167	D10		D11	168
169	D8		D9	170
171	D6		D7	172
173	D4		D5	174
175	D2		D3	176
177	D0		D1	178
179	CKIO		Bus Control	n/c
181	reserved**	reserved**		182
183	RD#	IRQ_A		184
185	RD/WR#	IRQ_B		186
187	WE0#	IRQ_C		188
189	WE1#	RESO#		190
191	reserved**	RESI#		192
193	reserved**	reserved**		194
195	WAIT#	reserved**		196
197	CS4#	reserved**		198
199	BAT	Power	GND	200

** This pin has no function on the DIMM-MX6-PB. It is terminated by pull-up or pull-down resistor.

5.2 J3, Extension Connector 2

Type 30-pin connector, Molex 529910308 (Receptacle)

Corresponding header at carrier board: Molex 537480308

Pin	Signal	Pin	Signal
1	SATA_RXN	2	LVDS_TX2_N
3	SATA_RXP	4	LVDS_TX2_P
5	SATA_TXP	6	LVDS_TX0_N
7	SATA_TXN	8	LVDS_TX0_P
9	GND	10	GND
11	HDMI_D2_P	12	LVDS_TX1_N
13	HDMI_D2_N	14	LVDS_TX1_P
15	HDMI_D1_P	16	GND
17	HDMI_D1_N	18	LVDS_CLK_N
19	HDMI_D0_P	20	LVDS_CLK_P
21	HDMI_D0_N	22	GND
23	HDMI_CLK_P	24	LVDS_TX3_N
25	HDMI_CLK_N	26	LVDS_TX3_P
27	HDMI_SCL	28	GND
29	HDMI_SDA	30	HDMI_HPD

5.3 J4, Debug Connector

Type 20-pin connector, Samtec FTSH-110-01-FM-DV-K-P

Pin	Signal	Pin	Signal
1	RTCK*	2	TCK
3	GND	4	GND
5	+3V3 (VREF)	6	TRST#
7	+3V3	8	+3V3
9	n/c	10	TDO
11	BOOT_MODE0	12	JTAG_DE#**
13	BOOT_MODE1	14	TMS
15	JTAG_MODE	16	TDI
17	GND	18	DBG_ACK*
19	JTAG_RESI#	20	JTAG_RESET#

* This pin has no function on DIMM-MX6-PB. It is pulled-down.

** This pin has no function on DIMM-MX6-PB. It is pulled-up.

6 Signal Characteristics

Abbreviations:

AI analogue input
 AO analogue output
 A I/O analogue bidirectional
 I digital input
 O digital output
 I/O digital bidirectional
 O(OD) digital open drain output

PU xK x K Ω pullup resistor
 PD xK x K Ω pulldown resistor
 SR xR x Ω series resistor
 IPU xK processor internal x K Ω pullup resistor
 IPD xK transistor internal x K Ω pulldown resistor

6.1 J1, SODIMM Connector

Name	i.MX6 Pad Name	GPIO	Direction	Termination	Volt	Current	Description
Ethernet							
SPEED_LED#	-	-	O(OD)	-	3.3V	20mA	100 Mbit indicator
ETH_TDP	-	-	AO	PU 49R9	-	N/A	TX diff. output pos.
ETH_TDM	-	-	AO	PU 49R9	-	N/A	TX diff. output neg.
ETH_RDP	-	-	AI	PU 49R9	-	N/A	RX diff. input pos.
ETH_RDN	-	-	AI	PU 49R9	-	N/A	RX diff. input neg.
LINK_LED#	-	-	O(OD)	-	3.3V	20mA	traffic indicator
USB Host							

USBH_PEN#	EIM_D31	GPIO3-31	O	PU 10K	3.3V		Power enable for external switch
USBH_OC#	EIM_D30	GPIO3-30	I	PU 10K	3.3V		Overcurrent from external switch
USBH_DP	USB_H1_DP	-	I/O	-	3.0V	N/A	Diff. data positive
USBH_DM	USB_H1_DN	-	I/O	-	3.0V	N/A	Diff. data negative
USB Device							
USBF_VBUS	USB_OTG_VBUS	-	I	-	5V	N/A	VBUS detection
USBF_DP	USB_OTG_DP	-	I/O	-	3.0V	N/A	Diff. data positive
USBF_DM	USB_OTG_DN	-	I/O	-	3.0V	N/A	Diff. data negative
UART							
UART2_TXD#	SD4_DAT7	-	O	-	RS232	1mA	RS232 transmit data
UART2_RXD#	SD4_DAT4	-	I	-	RS232	N/A	RS232 receive data
UART2_RTS#	SD4_DAT6	-	O	-	RS232	1mA	RS232 modem control
UART2_CTS#	SD4_DAT5	-	I	-	RS232	N/A	RS232 modem control
UART1_TXD	CSI0_DAT10	GPIO5-28	O	IPU 100K	3.3V	1mA	transmit data
UART1_RXD	CSI0_DAT11	GPIO5-29	I	IPU 100K	3.3V	N/A	receive data
UART3_TXD	EIM_D24	GPIO3-24	O	IPU 100K	3.3V	1mA	transmit data
UART3_RXD	EIM_D25	GPIO3-25	I	IPU 100K	3.3V	N/A	receive data
UART4_TXD	KEY_COL0	GPIO4-6	O	IPU 100K	3.3V	1mA	transmit data
UART4_RXD	KEY_ROW0	GPIO4-7	I	IPU 100K	3.3V	N/A	receive data
UART5_TXD	KEY_COL1	GPIO4-8	O	IPU 100K	3.3V	1mA	transmit data
UART5_RXD	KEY_ROW1	GPIO4-9	I	IPU 100K	3.3V	N/A	receive data
CAN							
CAN1_TX	KEY_COL2	GPIO4-10	O	IPU 100K	3.3V	1mA	transmit data
CAN1_RX	KEY_ROW2	GPIO4-11	I	PU 10K	3.3V	N/A	receive data
CAN2_TX	KEY_COL4	GPIO4-14	O	IPU 100K	3.3V	1mA	transmit data
CAN2_RX	KEY_ROW4	GPIO4-15	I	PU 10K	3.3V	N/A	receive data
4-Wire Resistive Touch Interface							
TOUCH_XP	-	-	A I/O	-	3.3V	N/A	X plus terminal

TOUCH_XM	-	-	A I/O	-	3.3V	N/A	X minus terminal
TOUCH_YP	-	-	A I/O	-	3.3V	N/A	Y plus terminal
TOUCH_YM	-	-	A I/O	-	3.3V	N/A	Y minus terminal
Bus Interface							
A0	EIM_DA0	-	O	-	3.3V	1mA	Address Bus
A1	EIM_DA1	-	O	-	3.3V	1mA	Address Bus
A2	EIM_DA2	-	O	-	3.3V	1mA	Address Bus
A3	EIM_DA3	-	O	-	3.3V	1mA	Address Bus
A4	EIM_DA4	-	O	PU 10K	3.3V	1mA	Address Bus
A5	EIM_DA5	-	O	PU 10K	3.3V	1mA	Address Bus
A6	EIM_DA6	-	O	PD 10K	3.3V	1mA	Address Bus
A7	EIM_DA7	-	O	PD 10K	3.3V	1mA	Address Bus
A8	EIM_DA8	-	O	-	3.3V	1mA	Address Bus
A9	EIM_DA9	-	O	-	3.3V	1mA	Address Bus
A10	EIM_DA10	-	O	-	3.3V	1mA	Address Bus
A11	EIM_DA11	-	O	-	3.3V	1mA	Address Bus
A12	EIM_DA12	-	O	-	3.3V	1mA	Address Bus
A13	EIM_DA13	-	O	-	3.3V	1mA	Address Bus
A14	EIM_DA14	-	O	-	3.3V	1mA	Address Bus
A15	EIM_DA15	-	O	-	3.3V	1mA	Address Bus
D0	CSIO_DATA_EN	GPIO5-20	I/O	-	3.3V	1mA	Data Bus
D1	CSIO_VSYNC	GPIO5-21	I/O	-	3.3V	1mA	Data Bus
D2	CSIO_DAT4	GPIO5-22	I/O	-	3.3V	1mA	Data Bus
D3	CSIO_DAT5	GPIO5-23	I/O	-	3.3V	1mA	Data Bus
D4	CSIO_DAT6	GPIO5-24	I/O	-	3.3V	1mA	Data Bus
D5	CSIO_DAT7	GPIO5-25	I/O	-	3.3V	1mA	Data Bus
D6	CSIO_DAT8	GPIO5-26	I/O	-	3.3V	1mA	Data Bus
D7	CSIO_DAT9	GPIO5-27	I/O	-	3.3V	1mA	Data Bus
D8	CSIO_DAT12	GPIO5-30	I/O	-	3.3V	1mA	Data Bus
D9	CSIO_DAT13	GPIO5-31	I/O	-	3.3V	1mA	Data Bus

D10	CSI0_DAT14	GPIO6-0	I/O	-	3.3V	1mA	Data Bus
D11	CSI0_DAT15	GPIO6-1	I/O	-	3.3V	1mA	Data Bus
D12	CSI0_DAT16	GPIO6-2	I/O	-	3.3V	1mA	Data Bus
D13	CSI0_DAT17	GPIO6-3	I/O	-	3.3V	1mA	Data Bus
D14	CSI0_DAT18	GPIO6-4	I/O	-	3.3V	1mA	Processor data bus
D15	CSI0_DAT19	GPIO6-5	I/O	-	3.3V	1mA	Processor data bus
CKIO	EIM_BCLK	GPIO6-31	O	-	3.3V	1mA	66 MHz bus clock
WAIT#	WEIM_WAIT	GPIO5_0	I	PU 2K2	3.3V	N/A	Wait Input
CS4#	EIM_CS0	GPIO2-23	O	-	3.3V	1mA	Chip select output
OE#	EIM_OE	GPIO2-25	O	-	3.3V	1mA	Read signal
WE0#	EIM_EB0	GPIO2-28	O	PU 10k	3.3V	1mA	Low byte enable
WE1#	EIM_EB1	GPIO2-29	O	PU 10k	3.3V	1mA	High byte enable
RD/RW#	EIM_RW	GPIO2-26	O	PD 10k	3.3V	1mA	Data direction signal
IRQ_A	NANDF_CLE	GPIO6-7	I	PU 10K	3.3V	N/A	Interrupt input
IRQ_B	NANDF_CS2	GPIO6-15	I	PU 10K	3.3V	N/A	Interrupt input
IRQ_C	NANDF_CS3	GPIO6-16	I	PU 10K	3.3V	N/A	Interrupt input
SPI							
SPI2_SS#	DISP0_DAT18	GPIO5-12	O	PU 10K	3.3V	3mA	Slave select output
SPI2_SCK	DISP0_DAT19	GPIO5-13	O	out (HIGH) / SR 33R	3.3V	1mA	Clock output
SPI2_MISO	DISP0_DAT17	GPIO5-11	I	out (HIGH)	3.3V	N/A	Input data from slave
SPI2_MOSI	DISP0_DAT16	GPIO5-10	O	out (HIGH)	3.3V	1mA	Output data to slave
SD Card Interface							
SDC1_D0	SD1_DAT0	GPIO1-16	I/O	IPU 100K	3.3V	1mA	SDC data
SDC1_D1	SD1_DAT1	GPIO1-17	I/O	IPU 100K	3.3V	1mA	SDC data
SDC1_D2	SD1_DAT2	GPIO1-19	I/O	IPU 100K	3.3V	1mA	SDC data
SDC1_D3	SD1_DAT3	GPIO1-21	I/O	IPU 100K	3.3V	1mA	SDC data
SDC1_CMD	SD1_CMD	GPIO1-18	I/O	IPU 100K	3.3V	1mA	CMD signal
SDC1_CLK	SD1_CLK	GPIO1-20	O	IPU 100K / SR 33R	3.3V	1mA	SDC Clock output
SDC1_CD#	GPIO_1	GPIO1-1	I	IPD 100K	3.3V	N/A	Card detect input
SDC1_WP	DIO_PIN4	GPIO4-20	I	IPU 100K	3.3V	N/A	Write protect input

SDC2_D0	SD2_D0	GPIO1-15	I/O	IPU 100K	3.3V	1mA	SDC data
SDC2_D1	SDC_D1	GPIO1-14	I/O	IPU 100K	3.3V	1mA	SDC data
SDC2_D2	SD2_D2	GPIO1-13	I/O	IPU 100K	3.3V	1mA	SDC data
SDC2_D3	SD2_D3	GPIO1-12	I/O	IPU 100K	3.3V	1mA	SDC data
SDC2_CMD	SD2_CMD	GPIO1-11	I/O	IPU 100K	3.3V	1mA	CMD signal
SDC2_CLK	SD2_CLK	GPIO1-10	O	IPU 100K / SR 33R	3.3V	1mA	SDC Clock output
SDC2_CD#	GPIO_4	GPIO1-4	I	IPU 100K	3.3V	N/A	Card detect input
SDC2_WP	GPIO_2	GPIO1-2	I	IPU 100K	3.3V	N/A	Write protect input
I2C							
I2C3_SCL	GPIO_3	GPIO1-3	I/O	PU 2K2	3.3V	3mA	I ² C clock signal
I2C3_SDA	GPIO_6	GPIO1-6	I/O (OD)	PU 2K2	3.3V	3mA	I ² C data signal
Audio SSI							
AUDIO_BCK	DISP0_DAT20	GPIO5-14	I/O	IPU 100K	3.3V	1mA	Sound bit clock
AUDIO_LRC	DISP0_DAT22	GPIO5-16	I	IPU 100K	3.3V	N/A	Sound L/R signal
AUDIO_DATI	DISP0_DAT23	GPIO5-17	I	IPU 100K	3.3V	N/A	Sound serial input data
AUDIO_DATO	DISP0_DAT21	GPIO5-15	O	IPU 100K	3.3V	1mA	Sound serial output data
Audio SPDIF							
SPDIF_IN	GPIO_16	GPIO7-11	I	IPU 100K	3.3V	N/A	SPDIF input data
SPDIF_OUT	GPIO_19	GPIO4-5	O	IPU 100K	3.3V	1mA	SPDIF output data
General Purpose I/O							
GPIO0	NANDF_D0	GPIO2-0	I/O	IPU 100K	3.3V	3mA	digital input / output
GPIO1	NANDF_D1	GPIO2-1	I/O	IPU 100K	3.3V	3mA	digital input / output
GPIO2	NANDF_D2	GPIO2-2	I/O	IPU 100K	3.3V	3mA	digital input / output
GPIO3	NANDF_D3	GPIO2-3	I/O	IPU 100K	3.3V	3mA	digital input / output
GPIO4/PWM1	GPIO_9	GPIO1-9	I/O	IPU 100K	3.3V	3mA	digital input / output
GPIO5/PWM2	SD4_DAT1	GPIO2-9	I/O	IPU 100K	3.3V	3mA	digital input / output
GPIO6/PWM3	SD4_DAT2	GPIO2-10	I/O	IPU 100K	3.3V	3mA	digital input / output
GPIO7	EIM_LBA	GPIO2-27	I/O	PU 10K	3.3V	3mA	digital input / output
Miscellaneous							
VOU_RST#	EIM_A16	GPIO2-22	O	PD 10k	3.3V	3mA	

VIO_SRC	GPIO_7	GPIO1-7	O	PD 10K	3.3V	3mA	
VIO_RST#	GPIO_8	GPIO1-8	O	PD 10K	3.3V	3mA	
RESI#	POR#		I	PU 10K	3.3V	N/A	Reset input from carrier board
RESO#	-	-	O	-	3.3V	3mA	Reset output to carrier board
BAT	-	-	-	-	2.3V – 3.3V	N/A	Battery backup input for RTC
+3V3			-	-	-	N/A	+ 3,3V supply
GND	-	-	-	-	-	N/A	Ground

6.2 J3, Extension Connector

Signal	i.MX6 Pad	Direction	Volt	Max. Current	Description
LVDS					
LVDS_CLK_P	LVDS0_CLK_P	O	2,5V	2,5mA	P signal of diff. LVDS clock
LVDS_CLK_N	LVDS0_CLK_N	O	2,5V	2,5mA	N signal of diff. LVDS clock
LVDS_TX0_P	LVDS0_TX0_P	O	2,5V	2,5mA	P signal of diff. LVDS data
LVDS_TX0_N	LVDS0_TX0_N	O	2,5V	2,5mA	N signal of diff. LVDS data
LVDS_TX1_P	LVDS0_TX1_P	O	2,5V	2,5mA	P signal of diff. LVDS data
LVDS_TX1_N	LVDS0_TX1_N	O	2,5V	2,5mA	N signal of diff. LVDS data
LVDS_TX2_P	LVDS0_TX2_P	O	2,5V	2,5mA	P signal of diff. LVDS data
LVDS_TX2_N	LVDS0_TX2_N	O	2,5V	2,5mA	N signal of diff. LVDS data
LVDS_TX3_P	LVDS0_TX3_P	O	2,5V	2,5mA	P signal of diff. LVDS data
LVDS_TX3_N	LVDS0_TX3_N	O	2,5V	2,5mA	N signal of diff. LVDS data
SATA					
SATA_TXP	SATA_TXP	O	2,5V	1,75mA	P signal of diff. SATA transmitter
SATA_TXN	SATA_TXM	O	2,5V	1,75mA	N signal of diff. SATA transmitter
SATA_RXP	SATA_RXP	I	2,5V	1,75mA	P signal of diff. SATA receiver
SATA_RXN	SATA_RXM	I	2,5V	1,75mA	N signal of diff. SATA receiver
HDMI					
HDMI_D2_P	HDMI_D2P	O	2,5V	4mA	P signal of diff. HDMI data
HDMI_D2_N	HDMI_D2M	O	2,5V	4mA	N signal of diff. HDMI data
HDMI_D1_P	HDMI_D1P	O	2,5V	4mA	P signal of diff. HDMI data
HDMI_D1_N	HDMI_D1M	O	2,5V	4mA	N signal of diff. HDMI data
HDMI_D0_P	HDMI_D0P	O	2,5V	4mA	P signal of diff. HDMI data
HDMI_D0_N	HDMI_D0M	O	2,5V	4mA	N signal of diff. HDMI data
HDMI_CLK_P	HDMI_CLKP	O	2,5V	4mA	P signal of diff. HDMI clock
HDMI_CLK_N	HDMI_CLKM	O	2,5V	4mA	N signal of diff. HDMI clock
HDMI_SCL	KEY_COL3	O	3,3V	3mA	HDMI I ² C clock signal
HDMI_SDA	KEY_ROW3	I/O (OD)	3,3V	3mA	HDMI I ² C data signal

Miscellaneous					
GND		-	-	N/A	Ground

6.3 J4, Debug Connector

Signal	i.MX6 Pad	Direction	Termination	Volt	Description
Debug Interface					
TCK	JTAG_TCK	I	PD 10K	3,3V	JTAG clock input
TMS	JTAG_TMS	I	IPU 47K	3,3V	JTAG mode select input
TRST#	JTAG_TRSTB	I	IPU 47K	3,3V	H-UDI reset input
TDI	JTAG_TDI	I	IPU 47K	3,3V	Data input
TDO	JTAG_TDO	O		3,3V	Data output
RTCK		O	PD 10K	3,3V	return TCK
JTAG_MODE	JTAG_MOD	I	PD 10K	3,3V	
JTAG_DE#		I	PU 10K	3,3V	
DBG_ACK		O	PD 10K	3,3V	
Miscellaneous					
JTAG_RESET#	POR#	I/O (OD)	PU 10K	3,3V	Debugger Reset input/output
JTAG_RESI#	POR#	I	PU 10K	3,3V	Manual Reset input
BOOT_MODE0	BOOT_MODE0	I	IPD 100K	3,3V	Boot mode selection
BOOT_MODE1	BOOT_MODE1	I	IPD 100K	3,3V	Boot mode selection
+3V3		-	-	-	+ 3,3V supply
GND		-	-	-	Ground

7 Technical Characteristics

7.1 Electrical Specifications

Supply voltage	3,3 V, +/-5%
Current consumption	up to 4.0 A, depending on CPU and GPU load (tbd)


7.2 Environmental Specifications

Operating temperature	
Standard:	0 ... +70°C
Extended:	-40 ... +85°C
Storage temperature	-40 ... +125°C
Relative humidity	0 ... 95 %, non-condensing

7.3 Mechanical Specifications

Weight	approx. 17 g
Board	Glasepoxi FR-4, UL-listed, 8 layers
Dimensions	67.6 mm x 50.0 mm x 10.0 mm

8 Dimensional Drawing

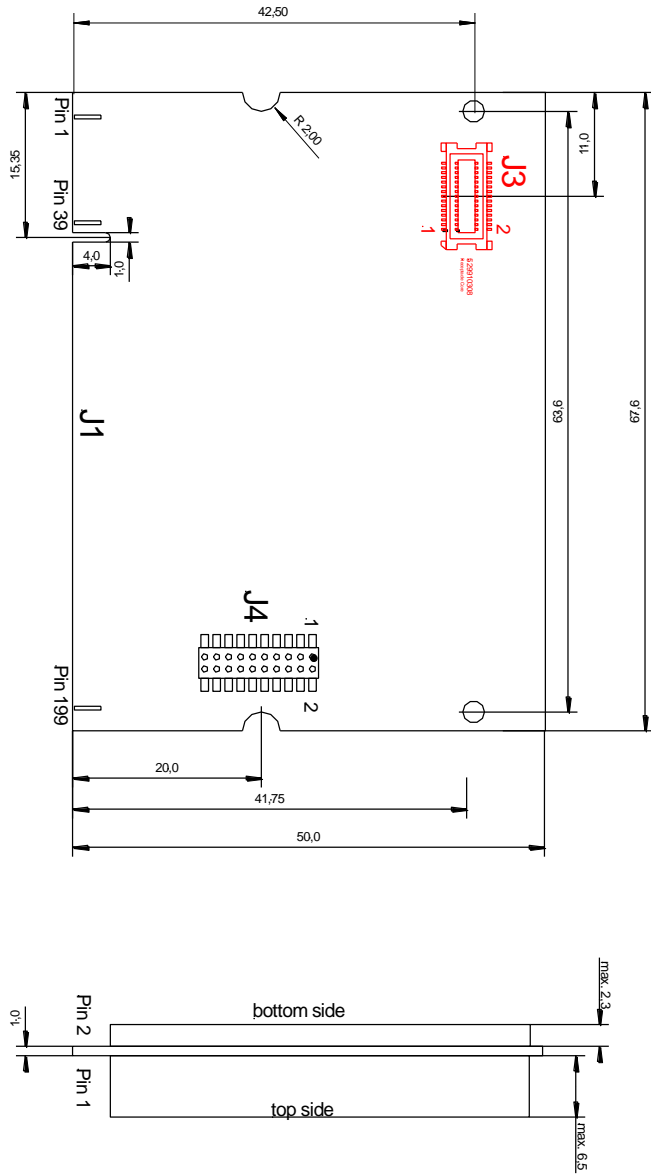

Red connector J3 is located on the bottom side of the CPU module.

9 References

- [1] i.MX6x
Reference Manual
i.MX 6Dual/6Quad Applications Processor Reference Manual
IMX6DQRM Rev. 3, 07/2015
Freescale

- [2] i.MX6x
Datasheet
i.MX 6Dual/6Quad Applications Processors for Industrial Products
IMX6DQIEC Rev. 4, 07/2015
Freescale

- [3] AR1020
Datasheet
AR1000 Series Resistive Touch Screen Controller
DS41393A
Microchip Technology Inc.